



# PRO-DMWS Deck Mount Widespread Installation Manual

## PRODUCT DESCRIPTION:

### SPECIFICATION:

1. AFTER YOU OPEN THE PACKAGE, PLEASE CHECK THE PHYSICAL PIECE AND CORRESPONDING ACCESSORIES.
2. THE PICTURE IS ONLY FOR REFERENCE.
3. ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT AFFECTING USE.

### INSTALLATION NOTES:

THE LIST OF PRODUCTS IS AS FOLLOWS: PLEASE REFER TO THE FIGURE ON THE RIGHT


NO	NAME	QTY	MATERIAL	REMARK
01	MIXED WATER OUTLET NOZZLE	1	CU	
02	BODY FOR COLD INLET	1	CU	BLUE
03	BODY FOR HOT INLET	1	CU	RED
04	T-junction	1	CU	
05	HOSE	4	S.S.	

### IMPORTANT TIPS:


1. A) PRESSURE: UNDER THE PRESSURE  $0.1 \pm 0.01$  MPA, SPOUT WITH ATTACHMENT FOR BASIN MIXER, SINK & KITCHEN MIXER, FLOW RATE  $\leq 0.1$  L/S.  
B) PRESSURE: UNDER THE PRESSURE  $0.3 \pm 0.02$  MPA, SHOWER MIXER, FLOW RATE  $\geq 0.33$  L/S, BASIN MIXER, BIDET, SINK & HEADSHOWER, FLOW RATE  $\geq 0.15$  L/S
2. RECOMMENDED WATER INLET TEMPERATURE  $4^{\circ}$ - $80^{\circ}$ .

### NOTES:



1. BE SURE TO REMOVE IMPURITIES AND SLUDGE FROM PRE-BURIED PIPES BEFORE INSTALLING FAUCETS.
2. AFTER INSTALLING THE FAUCET, PLEASE CHECK THAT EVERYTHING IS TIGHTLY CONNECTED AND ENSURE THAT THERE ARE NO LEAKS.
3. WHEN USING, PAY ATTENTION TO WATER HOSE SHOULD NOT BE IN TORSION TO AVOID HOSE RUPTURE.

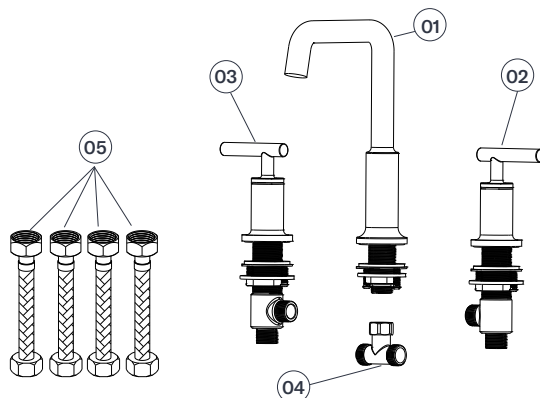


### DIMENSIONAL DRAWING:

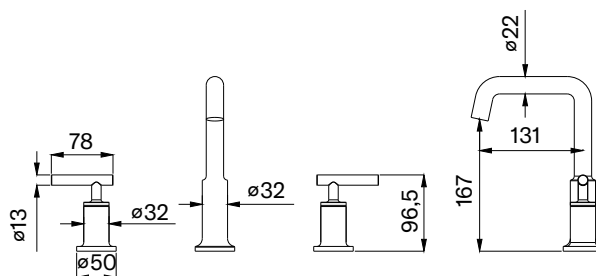


Spout working picture

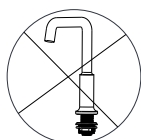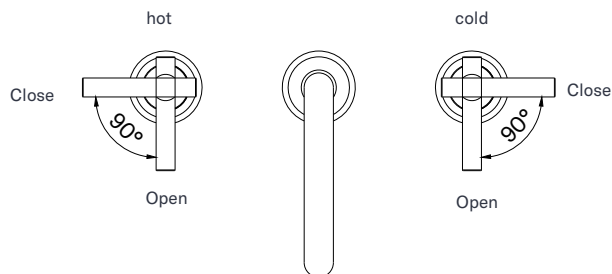

NO OPEN

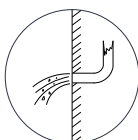

WASHING PIPE

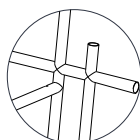

INSPECT PIPE

### INSTALLATION STEPS:

